4K SMART MEDIA PLAYER

3D FULL HD dlna KODI 4K ULTRA HD

DOLBY TRUE HD Miracast™ Wi Fi

Index

The Remote control 3
The Player Outputs 4
Connecting to TV 5
Connection to Internet 6
The home Screen 9
The apps Center 10
Smart Apps 11
Settings 12
Feature Overview 13
Specifications 15
FAQ 15

IMPORTANT SAFETY INSTRUCTIONS AND PRECAUTIONS

- Read all instructions carefully before use.
- Retain manuals for future reference.
- Use this product only in the manner described.
- Only use a water-dampened soft-cloth to clean the surface of this product.
- The following will damage this product: any liquid such as water or moisture, extreme heat; cold; humidity, dusty or sandy environments.
- Only place this device on stable surfaces and ensure that any attached cables are secure and will not cause the device to fall.
- If charging is required, it is recommended to thoroughly charge electronic devices for the first time overnight. Subsequent charges can be as needed. During charging, or extended use, the product may become warm.
- There are no user serviceable parts in this product.
- Un-authorized attempts to dismantle or repair this product will void product warranty
- Using this device near other electronic devices may cause interference.

THE REMOTE CONTROL

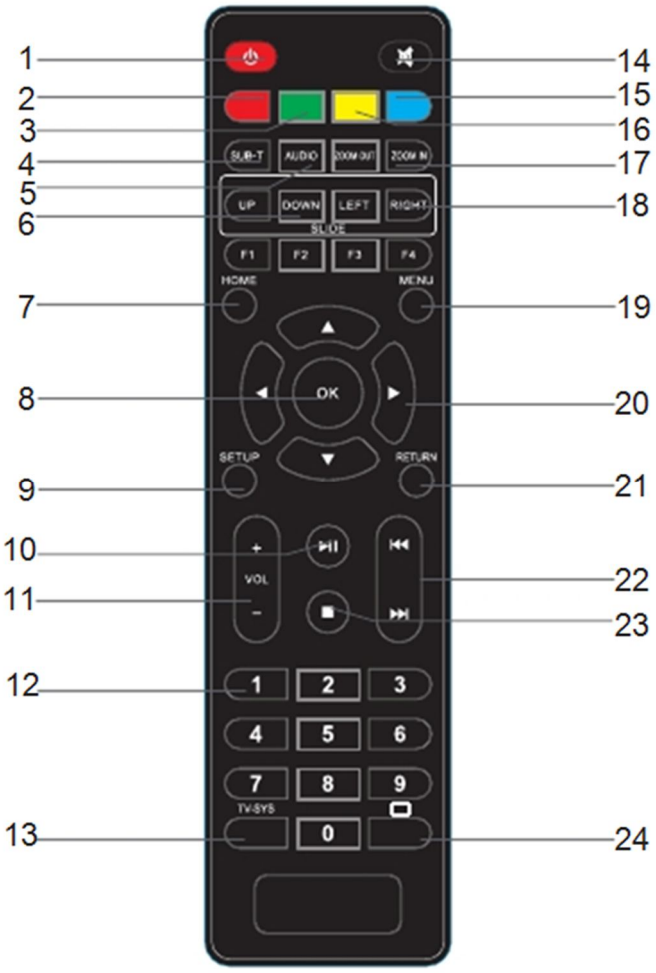

Note. Some subscription based Apps may require a mouse or keyboard for setup and operation.
(This mouse is not included with this product)

1	Power On / Off	13	Resolution change (shortcut)
2	(Red button) Switch to the cursor mode	14	Mute/Un-mute sound
3	*(Green button) Multi-function*	15	*(Blue button) Multi-function*
4	Sub-title	16	*(Yellow button) Multi-function*
5	Audio	17	Zoom In / Out
6	Slide up and down	18	Slide left and right
7	Home	19	Menu
8	OK	20	Move cursor left, right, up or down
9	Setup	21	Return (back a screen)
10	Play / Pause	22	Next / previous file
11	Volume Up / Down	23	Stop
12	Numeric buttons		

THE PLAYER OUTPUTS

SIDE PANEL

REAR PANEL

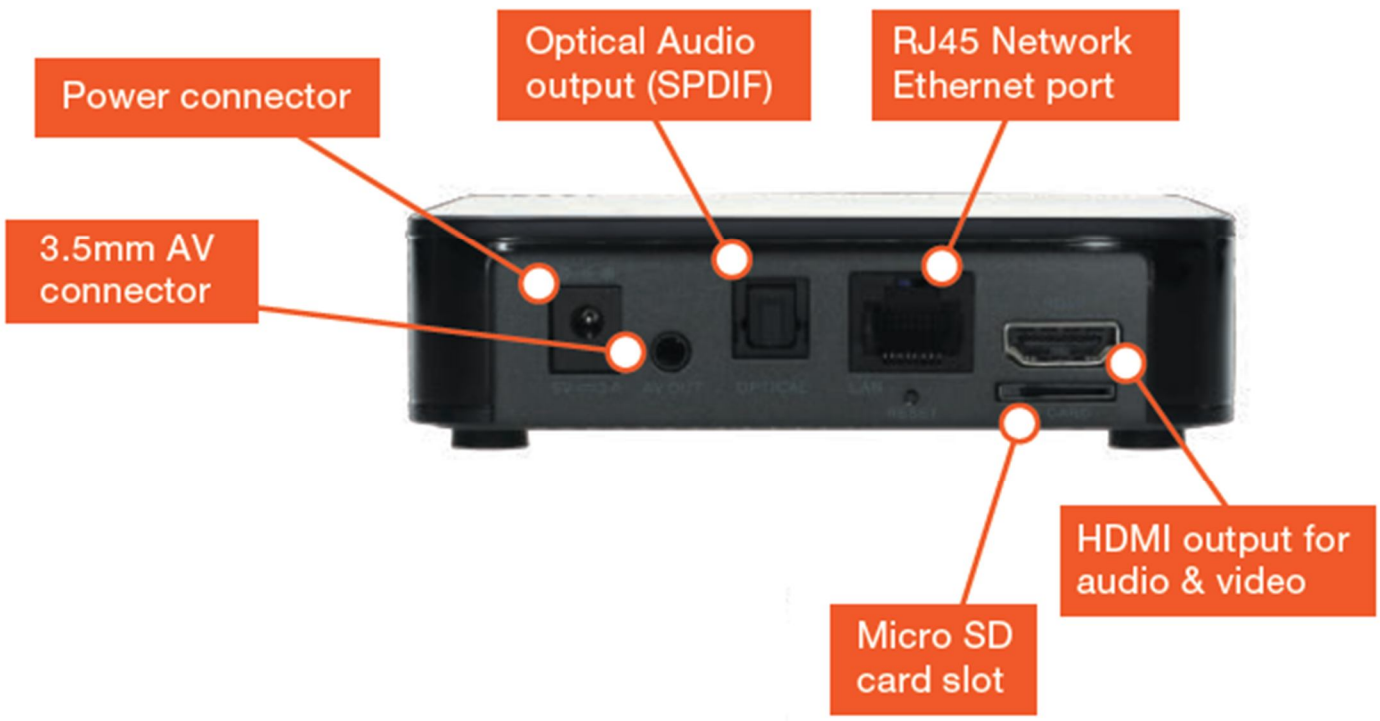

CONNECTING TO TV

GOOD – via RCA Cables

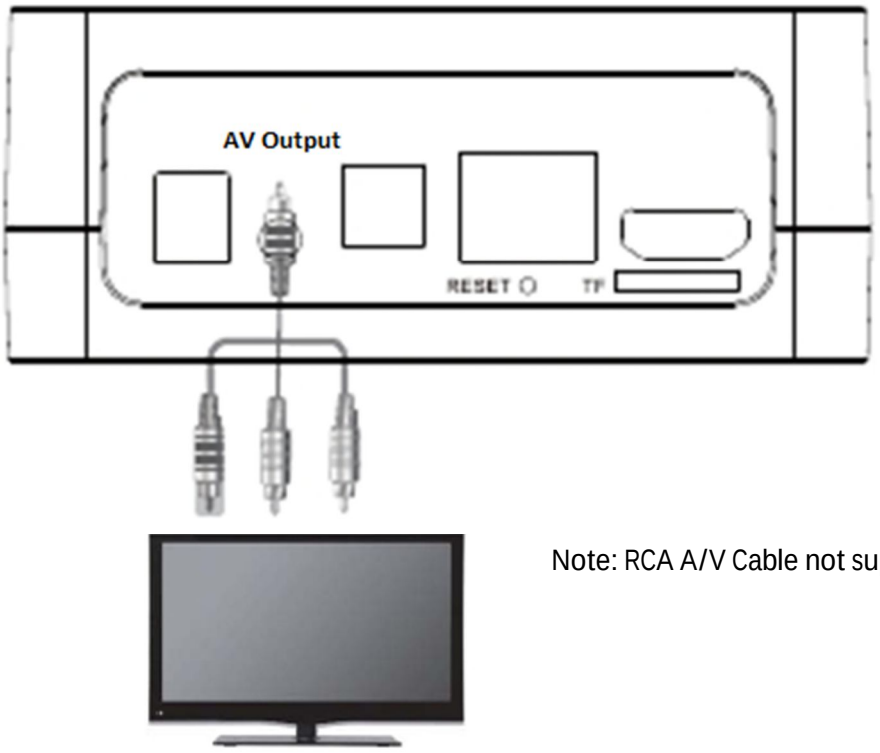

Note: RCA A/V Cable not supplied

BEST – via HDMI Cable

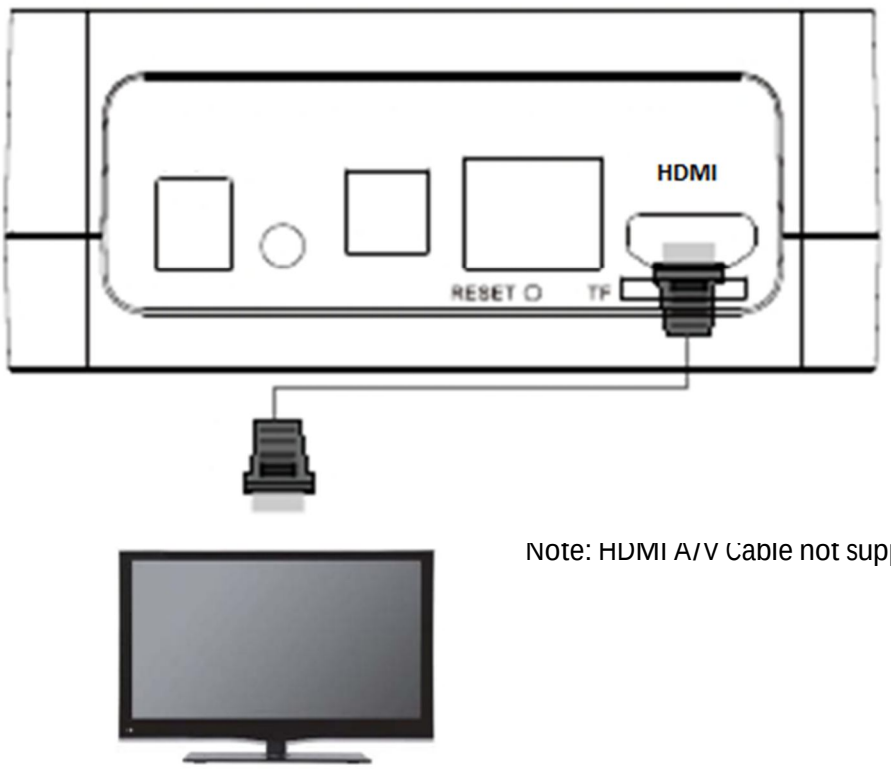

Note: HDMI A/V Cable not supplied

CONNECTION TO INTERNET

GOOD – Wi-Fi

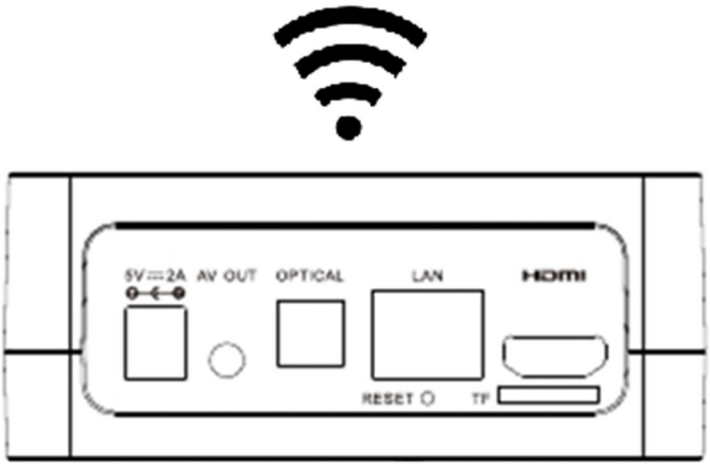

BEST – Direct Connection (to a Modem/Router)

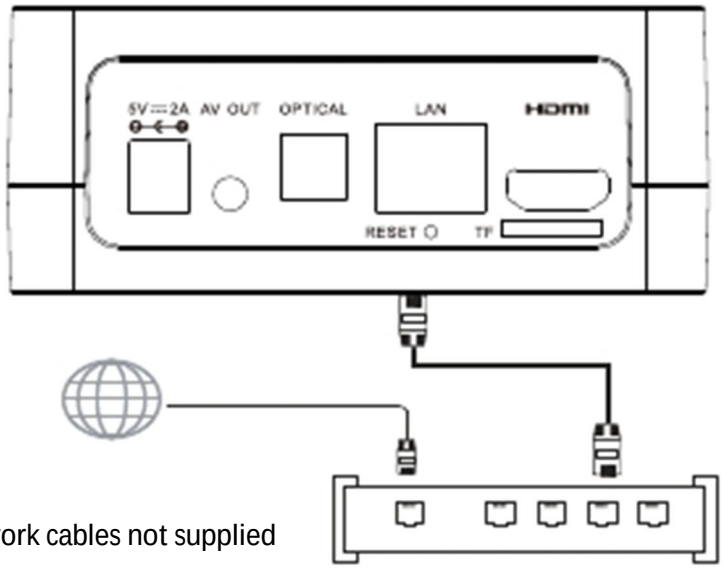

Note: Network cables not supplied

WIRELESS MODEM

Note: *An Ethernet cable internet connection is recommended for streaming HD and FHD video.*

Cable connection to the internet using a Modem/Router

- Connect the network cable to the Media Player and your Modem/Router.
- In most cases your Modem/Router will automatically assign network settings to your media player and display the screen below. Then click OK. If not, you may have to:
-Turn on and login into your Modem/Router to ensure an IP address can be automatically assigned to your Media Player (DHCP (Dynamic Host Configuration Protocol must be enabled)
- After connection has been successful the below screen will be displayed, showing IP, Netmask, Gateway and DNS. Then click OK.

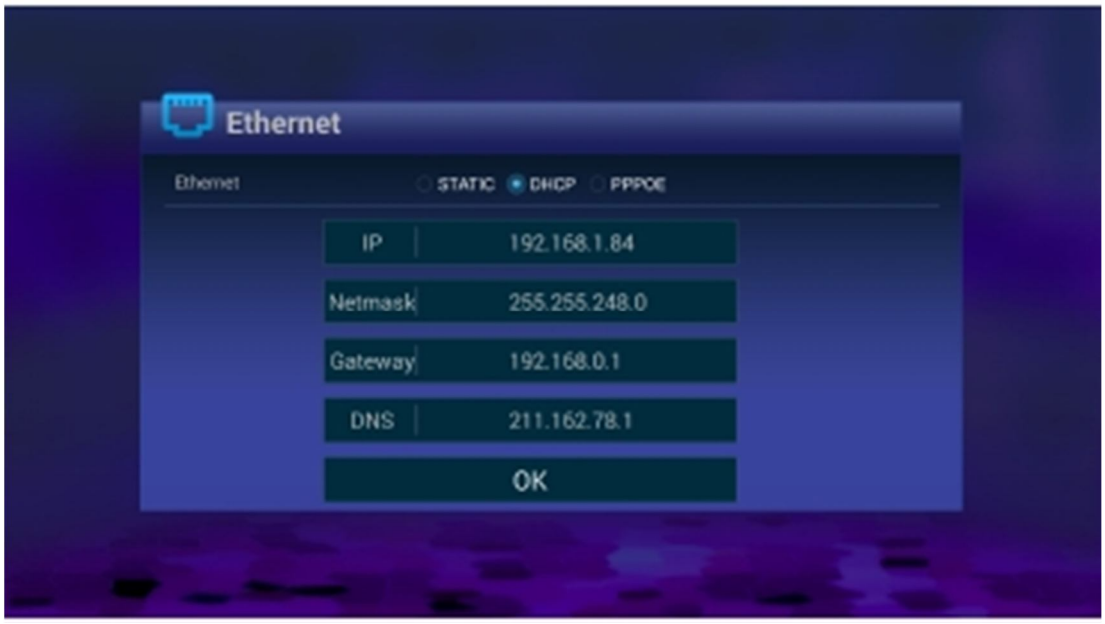

Wi-Fi connection to the internet using a Modem/Router

- Go into the "Settings" at the home screen, select "Wi-Fi" option.
- A list of available Wi-Fi connections will be displayed. See the example screen below.

Note: The Ethernet cable musts be unplugged.

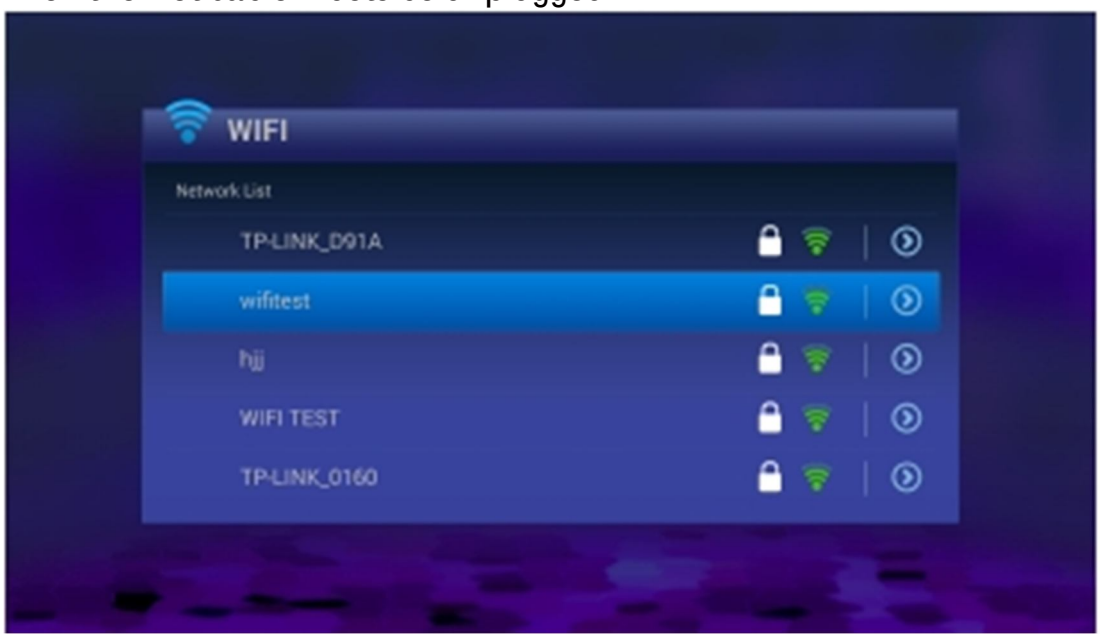

Note: If the wireless network is not encrypted, you can connect to it directly. If the network is encrypted, select the Wi-Fi name to pop up the window for password, press OK on the remote control and call out the soft keypad on the screen, enter the password, select "Next" on the keypad or press the Return key on the remote control to hide the keypad, and then select "Connect" to connect to it. (Note: to hide the keypad on the TV box, press the Return key on the remote control.)

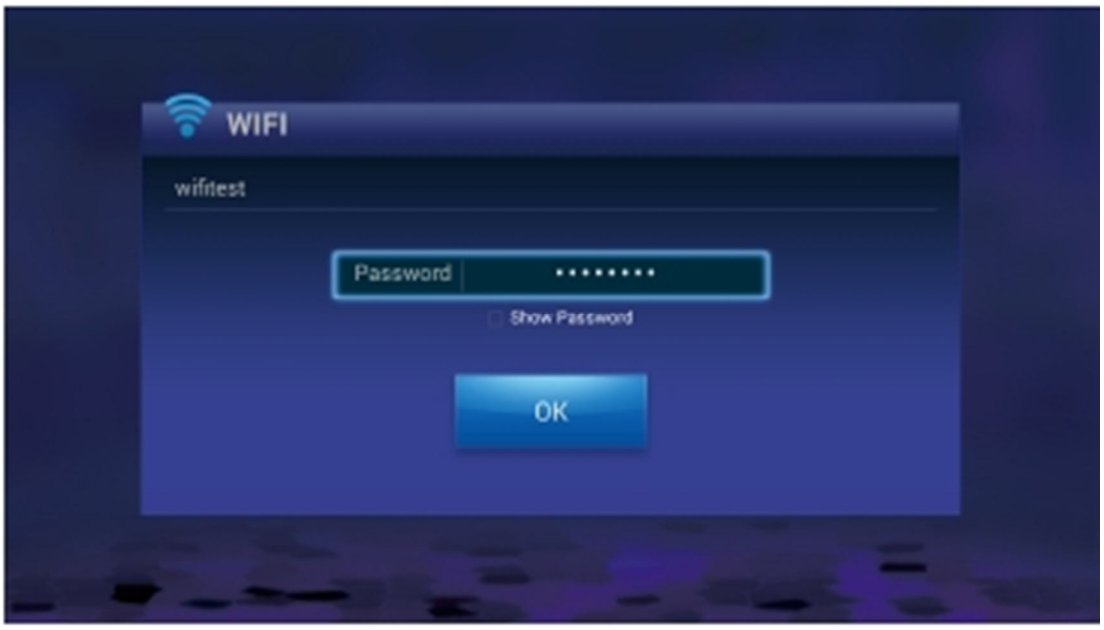

- To forget a WIFI connection, select it and press the Right button on the remote control. Then the interface shows up as below picture. Choose Forget button to forget this WIFI information.

APP OVERVIEW

The Home screen

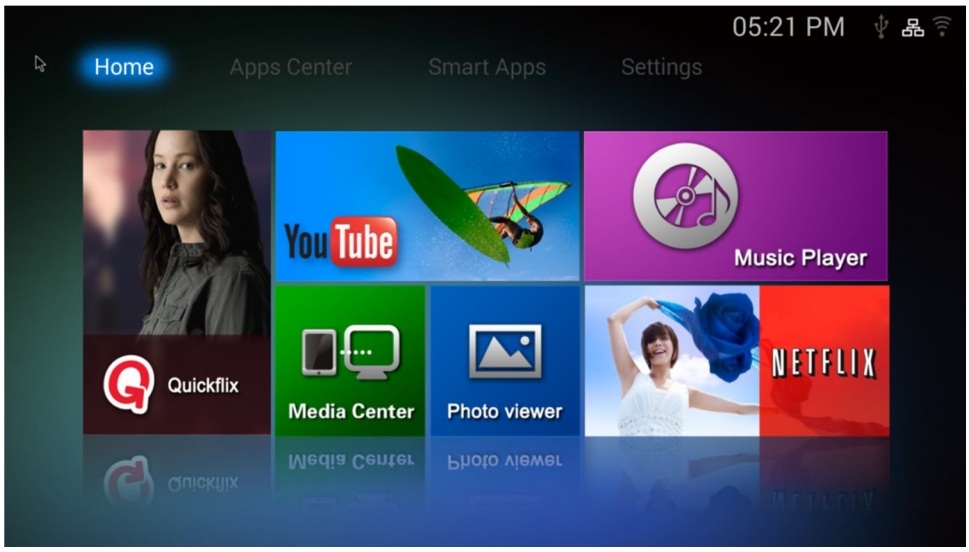

Note. Quickflix, Netflix, Skype and other subscription based Apps may require a mouse or keyboard for setup and operation.

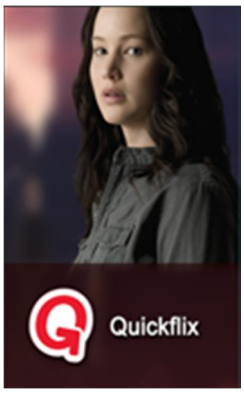	**Quickflix** Stream Movies and TV for a Monthly price. (Account is required)		**YouTube** Stream Youtube Videos
	Music Player Play Music through the device		**Media Center** Connect to DLNA Server to play Media
	Photo Viewer View photos on the device		**Netflix** Stream Movies and TV for a Monthly price.(Account is required) *Please note: A mouse may be required for use with this app*

The Apps Center

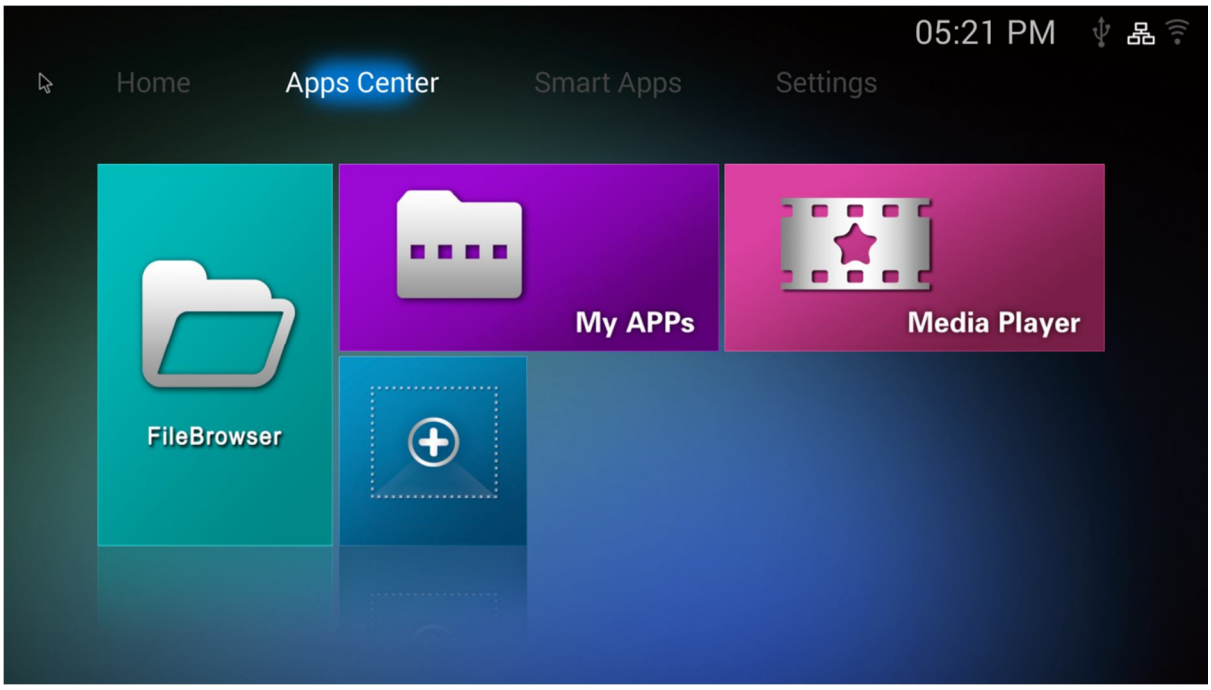

	FileBrowser Browse your files	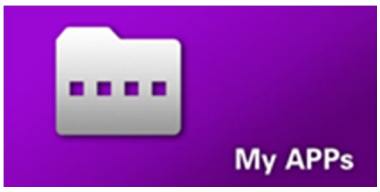	**My APPs** View app the installed apps
	Media Player Play Media through the device		+ Add apps to the Apps Center screen

Smart Apps

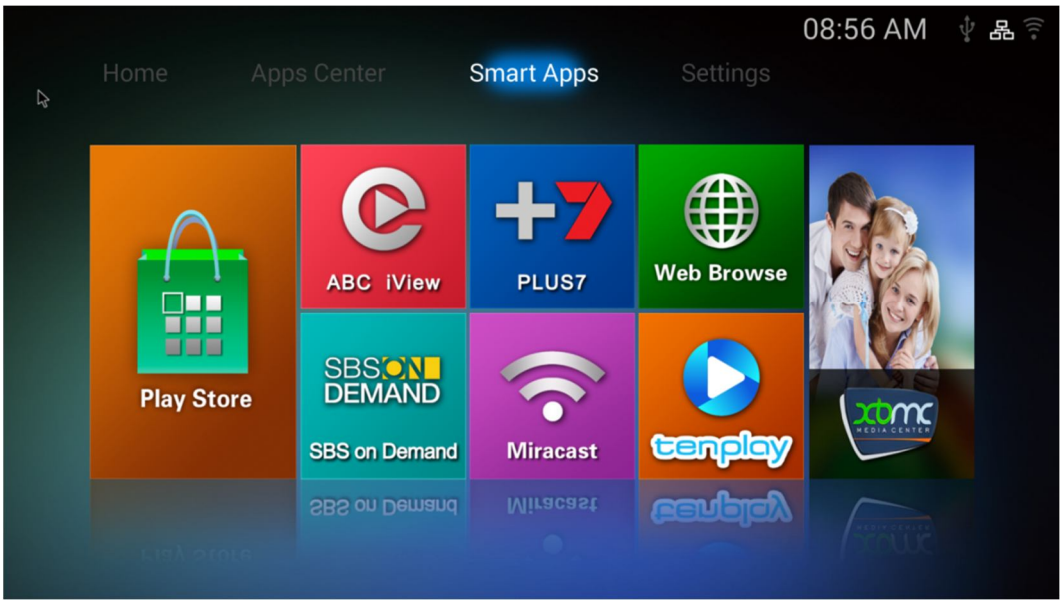

	Play Store Access the Google Play Store. Purchase and Download apps, music, movies and more		**ABC iView** Let's you catch up on the best of ABC TV *Please note: A mouse may be required for use with this app*
	Plus7 Let's you catch up on the best of Seven TV *Please note: A mouse may be required for use with this app*		**Web Browse** Browse the Web
	SBS on Demand let's you catch up on the best of SBS TV *Please note: A mouse may be required for use with this app*		**Miracast** Wirelessly display that allows you to Mirror your Smartphone or tablet
	Tenplay let's you catch up on the best of Ten TV *Please note: A mouse may be required for use with this app*		**XBMC (Kodi)** is a free and open-source media player software. It allows users to play and view most videos, music, such as podcasts from the internet, and all common digital media files from local and network storage media. For more information please visit: kodi.wiki/view/Quick_start_guide

Settings

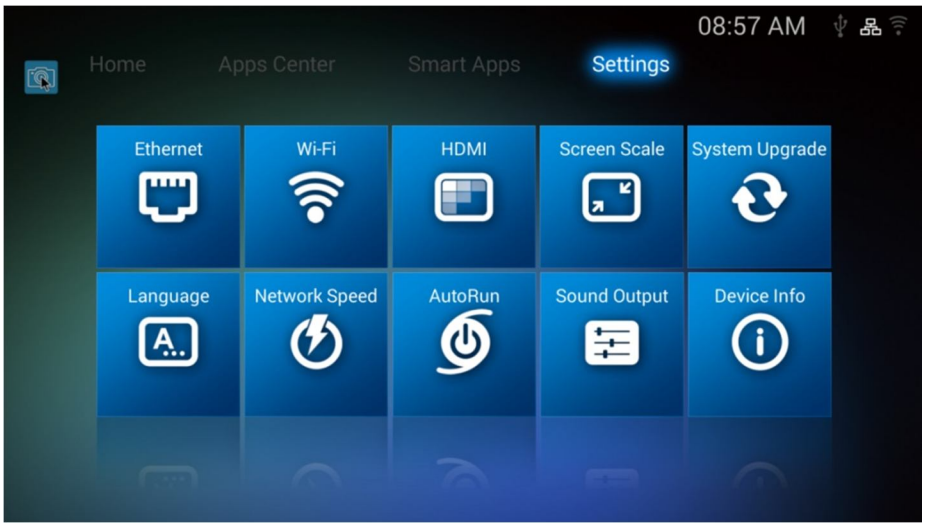

	Ethernet Check the Ethernet Settings and IP information		**Wi-Fi** Setup a Wi-Fi connection
	HDMI Change the screen resolution		**Screen Scale** Adjust the screen scale to fit on screen properly
	System Upgrade Upgrade the System either via Storage or OTA (Over the Air)		**Language** Change Language
	Network Speed Check the current Network Speed		**AutoRun** Allow apps to auto run
	Sound Output Change the sound output	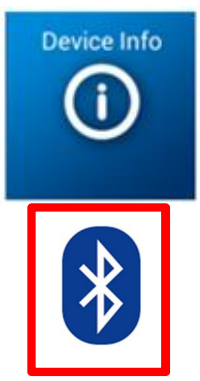	**Device Info** View the device information. **Note. Use the ADVANCED button under "Device Info" to turn on Bluetooth if required. This button will take you to the Android Settings page.**

FEATURE OVERVIEW

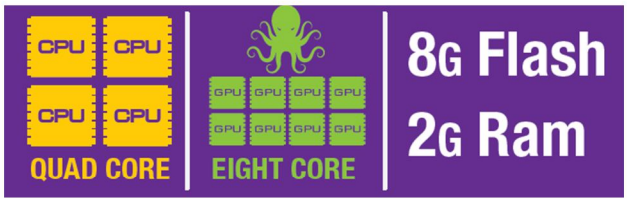 **8Core GPU & QUAD Core CPU** **Fast Processor & memory designed for video** With a Quad core 2Ghz processor and 8GB storage/2GB flash of processor memory, your movies will play smoothly and load faster	 **4k Ultra HD resolution ready** Stunning clarity, vivid colour and sharp detail will make the best of new generation UHD TV's, Full HD 1080p also looks great.
 Digital Surround Sound All sound formats from 2 channel stereo to 7.1 Dolby and DTS. Also Flac lossless HD audio is supported.	 **3D ready*** Watch eye popping 3D content from files (like BDMV / 3D BD-ISO or streamed 3D movies)
 DLNA Playback content from your network of DLNA devices.	 **Miracast ready** Share your tablet or smartphone screen onto your TV for everyone to see. (it's like HDMI only wireless)
 High Speed LAN With up to 100MB lan fast data transfer, wait times for movie buffering are a thing of the past	 **Android OS Smarts** Android opens a world of possibilities through the Google Play store. Games, video players, apps, utilities and lots more.

USB Ports & Micro SD input Connect USB flash drives, hard drives or input devices like mice, keyboards or web cams or read content from a Micro SD card.	**HDMI or Analogue AV output** Connect to older TV's via Composite video and L/R stereo (cable included) or connect to new TV's with HDMI for the ultimate in sound and vision.
Wireless Connectivity Wifi and Bluetooth on board means that you can connect to wireless networks or connect wireless products to the media player	**Play it all -Multi source, Multi Format ready** Whether it's 4K movies from Netflix®, Youtube® videos online or movies/music from your home network or USB storage drive, with KODI and other media players file playback is assured*

Note: Although this android Media Player can support all the above features, you must have the correct hardware and compatible video files. For example, if you would like to playback a 3D movie you must have a 3D TV and a 3D movie file first, in order for this feature to work correctly.

FAQ

Some apps I downloaded are not working properly. Why?	They may have not installed correctly. Please uninstall the apps and reinstall them again.
Some apps not working properly with the remote. Why?	Some apps are not designed to be used with a remote. I Suggest using a mouse instead.
My remote control is not working. Why?	Make sure the batteries are installed correctly. Try a different set of batteries. *Please note: Some apps will not work correctly with a remote. A mouse may be required for use.*

SPECIFICATIONS

Interface	Composite AV Out (Jack to RCA)
	HDMI
	USB x 3
	LAN
	Micro SD Card
Power Supply	5V 2A
Dimensions	109 x 109 x 45mm

Warranty Against Defects

Laser Corporation Pty Ltd ("Laser") warrants your new product to be free from defects in materials and workmanship for 36 months, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.
Through a network of retailers and resellers, Laser will provide you with your choice of a repair, exchange (where possible) or refund (within Dead on Arrival period) for this product if it becomes defective within the warranty period.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, normal wear and tear, neglect or improper storage. Please retain your receipt as proof of purchase
How to make a product warranty claim:
Step 1: Find your receipt which proves the date of purchase. Where the date of purchase cannot be verified, your place of purchase or Laser will make an assessment based on the date of manufacture, the condition of the Laser Product and the type of defect.
Step 2a): Contact your place of purchase. They will assess the nature of the fault and repair, replace or fund the product as per their store refund or warranty policy.
Step 2b): If your place of purchase cannot be contacted, then you can contact Laser. Customer Service with details of your defective Laser Product: Phone: (02) 9870 3355; or Email: support@laserco.com.au or online www.laserco.com.au/warranty (click on "Consumers (End Users)"). Our business address is at 1/6-8 Byfield Street, North Ryde, NSW 2113
Step 3: Laser will issue you with a Return Authorisation (RA) number within 48 hours. When requested, send us the defective Product and a copy of your receipt. Laser will cover the cost of the return delivery.
Step 4: Wait for us to contact you. Once we have received your defective Laser Product for inspection, we will inform you of our assessment of your claim within 7 days. When we contact you, we will firstly let you know whether you have a valid claim under this Warranty, and if so, we will inform you whether your defective Laser Product will be replaced or repaired, together with the number of days you can expect to wait to receive your replaced or repaired Laser Product.
Step 5: For further details on warranty cover and returns, please check **Terms and Conditions for Warranty Returns** section on http://www.laserco.com.au/warranty
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.